





Power Source:

- a. Electrical (three phase motor, 480 voltage)
- b. Hydraulic (residual energy in the ram)

- (3) 7XUQ NH\ WR WKH 36\ VWHP 2II' SRVLWLRQ DQG UHP
- (4) Push in the emergency stop button located on the bottom right corner of the panel.
- (5) 7XUQ RQ RII VZLWFK WR WKH 3RII' SRVLWLRQ
- (6) Go to electrical panel EPL-1343, open panel door and with your back to the breakers & reaching to the side, turn off breakers 1-3-5 and 2-4-6.
- (7) Attach breaker lockout devices and locks to breakers 1-3-5 and 2-4-6.
- (8) If work will be done on the interior of baler or hydraulic ram, apply blocking to the ram to keep it from moving.
- (9) Press the forward or reverse button on the panel



(9)